




Pairing RK / XR5 with a base station


1

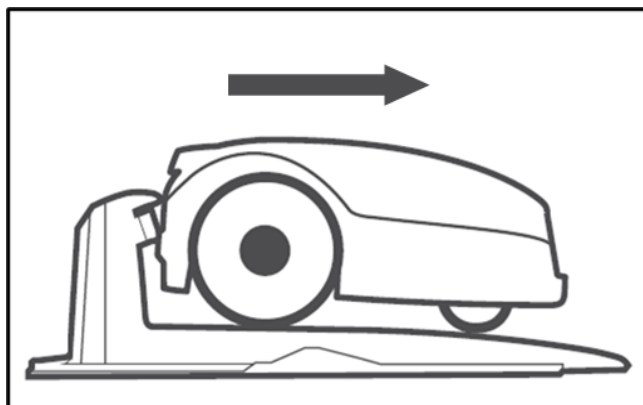

- EN Remove robot from station
- DE Roboter von der Station entfernen
- FR Retirer le robot de la station
- NL Verwijder robot van station
- IT Rimuovere il robot dalla stazione
- NO Ta roboten ut av ladestasjonen
- SW Tag ur roboten ur stationen
- DK Tag robotten ud af ladestationen
- ES Retirar el robot de la estación
- PL Usunąć robota ze stacji

2


- EN Remove System disabling device
- DE Unterbrecher entfernen
- FR Retirer la clé de sécurité
- NL Veiligheidssleutel verwijderen
- IT Rimuovere la chiave di sicurezza
- NO Fjern sikkerhetsnøkkelen
- SW Ta ur säkerhetsnyckel
- DK Fjern sikkerhedsnøglen
- ES Quitar la llave de seguridad
- PL Usunąć klucz bezpieczeństwa

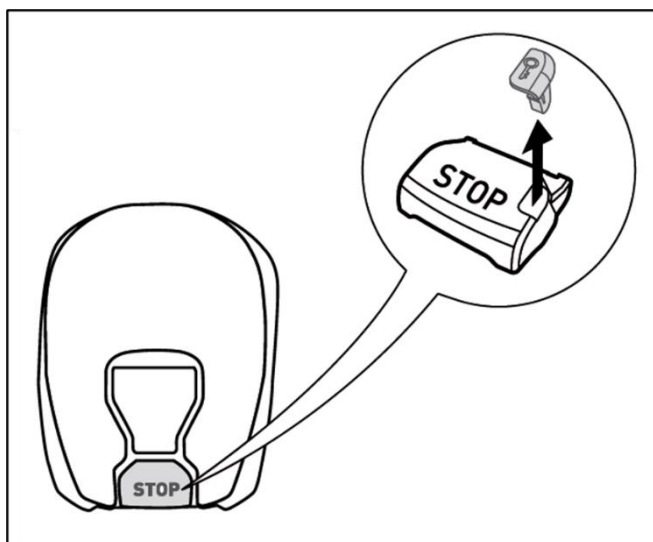



Pairing RK / XR5 with a base station


3

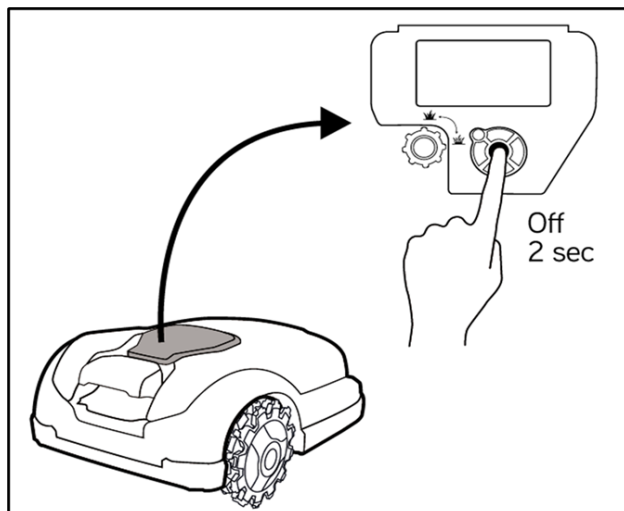

- EN Switch Off robot
- DE Roboter ausschalten
- FR Éteindre le robot
- NL Robot uitschakelen
- IT Spegner il robot
- NO Skru av roboten
- SW Stäng av robot
- DK Sluk for robotten
- ES Apagar el robot
- PL Wyłączyć robota

4


- EN Keep station powered up
- DE Station eingeschaltet lassen
- FR Maintenir la station sous tension
- NL Houd het station onder spanning
- IT Mantenere la stazione alimentata
- NO Ikke slå av ladestasjonen
- SW Dra inte ur sladden till laddstationen
- DK Sluk ikke ladestationen
- ES Mantener la estación encendida
- PL Utrzymywać stację pod napięciem

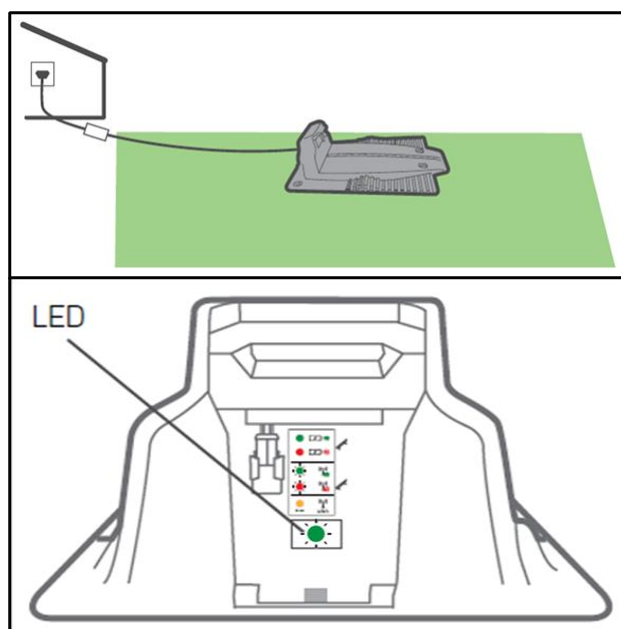



Pairing RK / XR5 with a base station


5

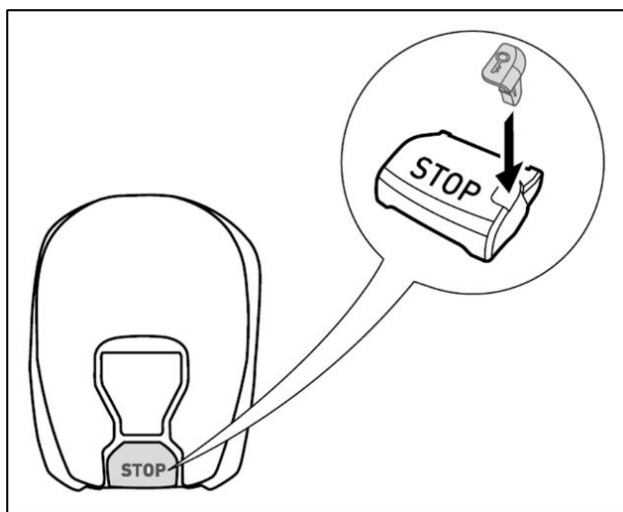

- EN** Insert System disabling device
- DE** Unterbrecher einsetzen
- FR** Insérer la clé de sécurité
- NL** Plaats Veiligheidssleutel terug
- IT** Inserire la chiave di sicurezza
- NO** Sett inn sikkerhetsnøkkelen
- SW** Sätt i säkerhetsnyckel
- DK** Indsæt sikkerhedsnøglen
- ES** Introduzca la llave de seguridad
- PL** Włożyć klucz bezpieczeństwa

6


- EN** Switch On robot
- DE** Roboter einschalten
- FR** Mettre le robot en marche
- NL** Robot inschakelen
- IT** Accendere il robot
- NO** Skru på roboten
- SW** Slå på robot
- DK** Tænd robotten
- ES** Encender el robot
- PL** Włączyć robota

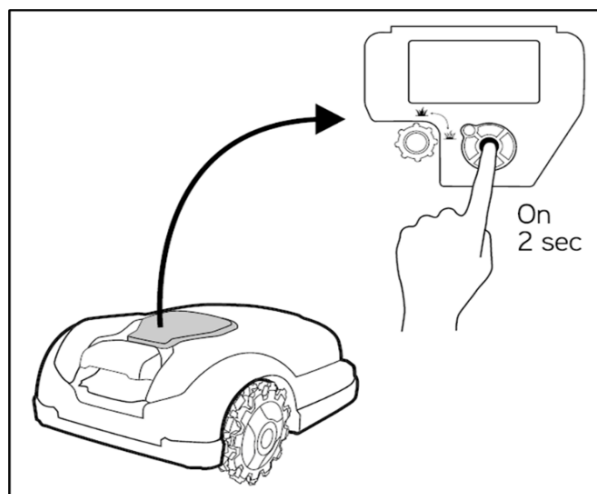



Pairing RK / XR5 with a base station

7

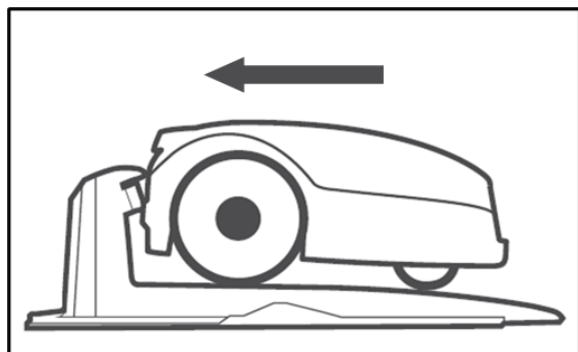

- EN** Place the robot in the station and wait 1 min.
- DE** Roboter in die Station stellen und 1 min. warten
- FR** Placer le robot dans la station et attendre 1 min.
- NL** Plaats de robot in het station en wacht 1 min.
- IT** Posizionare il robot nella stazione e attendere 1 minuto
- NO** Sett roboten inn i ladestasjonen og vent 1 minutt
- SW** Placera roboten i laddstationen och vänta 1 minut
- DK** Sæt robotten i ladestationen og vent 1 min.
- ES** Coloque el robot en la estación y espere 1 min.
- PL** Umieścić robota w stacji i odczekać 1 min.